


# M712KD CURLING RIBBON DISPENSER

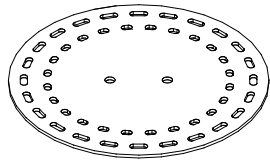

RIBBON HOLDING DISC

1. ATTACH THE TWO FEET TO THE BASE USING THE 1/4" BOLTS, FLATWASHERS, AND KEPS NUTS AS SHOWN.

NOTE: NOT ALL FASTENERS SHOWN FOR CLARITY.

2. ATTACH THE TWO SETS OF WIRE HOOKS ON OPPOSITE SIDES OF THE SQUARE TUBING UPRIGHT WITH 2-#6 SCREWS, & KEPS NUTS AS SHOWN.

NOTE: NOT ALL FASTENERS SHOWN FOR CLARITY.

3. ATTACH THE RIBBON HOLDING DISC BY PRESSING THE PLASTIC CAP INTO THE TOP OF THE SQUARE TUBE UPRIGHT.

4. LOAD THE RIBBON AS SHOWN BELOW. THE RIBBON IS FEED THRU THE HOLES IN THE RIBBON HOLDING DISC.

